

CA755B

Before Use

Please fully charge our product before the first use. The charging time of the AV wand is approximately 270 minutes, and the charging time of the remote-controlled egg is approximately 100 minutes, after it's fully charged, the LED light will stay on.

Please remove piercings or jewelry in the nipple, genital, and other areas before use. Be sure to clean and disinfect the product before use. If you want to use a lubricant please adequately lubricate the product and your private parts with a water-based lubricant.

Product Specification

Product Name: Elora

Product No.: CA755B

AV Wand

Material: Silicone, ABS

Size: 315.3 × 52.0 mm

Weight: 237.7 g ±5 g

Battery Type: Polymer lithium battery

Rated Voltage: 3.7 V

Battery Capacity: 2500 mAh

Charging Current: 2500 mA

Charging Time: ≤ 270 minutes

Working Time: ≥ 100 minutes

Vibration Modes: 10 modes

Heating Function: 42 °C

Waterproof Rating: IPX7

Remote-Controlled Egg

Material: Silicone, ABS

Size: 71.2 × 20.0 mm

Weight: 23.8 g ±5 g

Battery Type: Polymer lithium battery

Rated Voltage: 3.7 V

Battery Capacity: 150 mAh

Charging Current: 150 mA

Charging Time: \leq 100 minutes

Working Time: \geq 45 minutes

Vibration Modes: 10 modes

Heating Function: 42 °C

Waterproof Rating: IPX7

Button Display



Magnetic Charging Port



AV Wand Large Head Control Button



AV Wand Small Head Control Button



Egg Button





Remote Control Button

How to Use

AV Wand

Power On / Off



Press the button “/” for 1.5 seconds to turn the AV wand large head / small head on or off.

Vibration Mode



When powered on, short press the “/” button to switch between 10 vibration modes.

Double-press to turn off vibration. Press once again to restart vibration.

Heat Mode

When powered on, press the “/” button three times consecutively to activate the heating function. The indicator light will flash. Press three times again to turn off heating function.

Travel Lock


When powered off, press and hold the “+” button for 6 seconds simultaneously. The indicator will flash three times to activate Travel Lock. Press and hold again for 6 seconds to unlock.

Remote-Controlled Egg



Power On / Off


Press the button “” for 1.5 seconds to turn the egg on or off.

Vibration Mode



When powered on, short press the “” button to switch between 10 vibration modes. Double-press to turn off vibration. Press once again to restart vibration.

Remote Control Function

Press and hold the “” button for 1.5 seconds to turn remote control on or off. When either end of the AV wand is powered on (or both), short press the “” button to control the vibration modes of the active end.

Double-press to turn off vibration; press again to restart. Press the “” button three times consecutively to turn the AV wand heating function on or off.

Travel Lock

When powered off, press and hold the “+” button for 6 seconds simultaneously. The indicator will flash three times to activate Travel Lock. Press and hold again for 6 seconds to unlock.

APP Remote Control

Turn on your phone's Bluetooth and connect the product to the official APP for remote control. (The APP can be downloaded by scanning the QR code attached)

[[二维码图片](#)]

LED Display

Working	LED remains on
Low battery	LED flashes
Charging	LED flashes
Fully Charged	LED remains on

Usage Instructions

Before using this product, please read this instruction manual thoroughly and understand the usage precautions, product features, and methods to ensure correct and safe use.

Additionally, keep this manual in a safe place for future reference.

- Clean the product thoroughly before use with a water-based lubricant.
- If not used for a long time, clean it well and store it away from direct sunlight, high temperatures, and high humidity.

Charging

- Always use a standard charging AC adapter and the included charging cable. The fast-charging adapter may cause the built-in battery to deteriorate or fail to charge fully.
- Make sure the connection part does not get wet during charging.
- Ensure the charging time does not exceed 12 hours and monitor the charging process closely.
- Do not use the product while charging.

Maintenance

This product complies with the international waterproof standard and can withstand high-pressure water flow from any angle. Submerging it in water may cause malfunction.

Wipe off any moisture and dry it completely after rinsing.

- If not used for a long time, store it away from high humidity and direct sunlight.
- Before the first time or after a long period of non-use, make sure to charge it once fully.

Warning

- As this is an adult product, keep it out of reach of children.
- If you experience skin allergies or discomfort while using the product, stop using it immediately and consult a doctor if necessary.
- If you find any malfunction or abnormal behavior, stop using it immediately and turn off the power.

Disposal

- This product contains a lithium-polymer battery. Do not dispose of it as household waste. When disposing, remove the battery and follow the disposal methods prescribed by your local authorities.