



BE YOUR LOVER
Lovely present.

设计:Mark



Lippy
User Manual

Table of contents

Before Use	1
Product Specification	1
Buttons Display	2
How to Use	3
LED Display	3
Usage Tips	4
Pleasure Guide	7
Safety Tips	11
Troubleshooting, Warranty & Customer Support	12
Warranty & Customer Support	13

Before Use

 
Please fully charge our product before the first use. The charging time is about 2 hours, after it's fully charged, the LED light will stay on.

Please remove piercings or jewelry in the nipple, genital, and other areas before use. Be sure to clean and disinfect the product before use. If you want to use a lubricant please adequately lubricate the product and your private parts with a water-based lubricant.

Product Specification

Product Name: Lippy	Charging Current: 650mA
Product No.: VX723A	Working Time: 2 hours
Material: Silicone, ABS, POM	Suction Mode: 3
Size: 133*71*60mm	Tongue Licking Modes: 10
Weight: 238g	Vibration Modes: 10
Battery Type: Lithium battery	Heating Mode: 42°C
Battery Capacity: 1200mAh	Waterproof Rating: IPX6
Rated Voltage: 3.7V	

Button Display

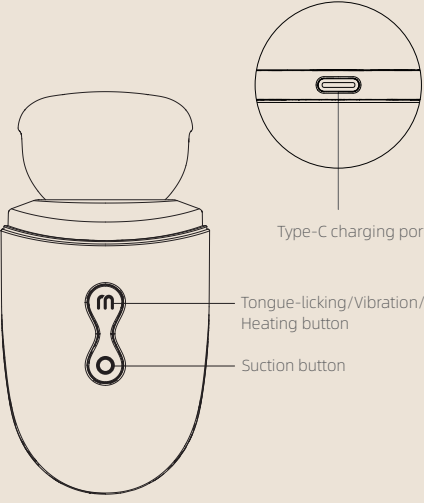

Type-C charging port

Tongue-licking/Vibration/Heating button

Suction button

Note: This product supports a Type-C output interface and can power external devices (maximum output current up to 600mA when connected externally).

How to Use

Power (On/Off)
Long press the "M" key for 1.5 seconds to turn the power on/off.

Vibration Tongue Lick
Press the "M" key to switch between 10 tongue-licking or vibration modes.

Heat Mode
Double-tap the "M" key to turn on the heating function. The indicator light around the button will turn red. Double-tap again to stop the heating function.


Suction Mode
Press the "O" key to switch between three suction modes. Hold it for 1.5 seconds to turn off the suction function.

LED Display

Working	LED remains on
Low battery	LED flashes
Charging	LED flashes
Fully Charged	LED remains on


Usage Tips

 Charge Before Use

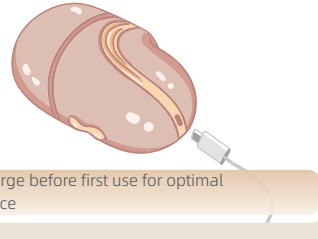


Fully charge before first use for optimal experience

 Clean Before & After

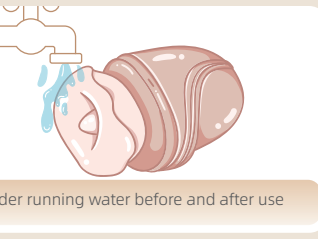


Rinse under running water before and after use

 Start Gently

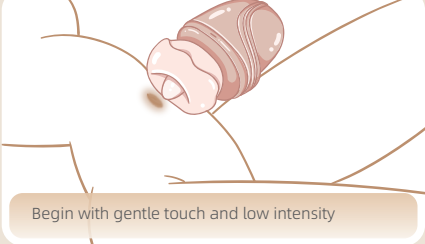

Begin with gentle touch and low intensity

 Explore Your Rhythm

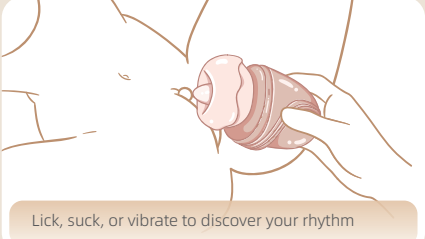

Lick, suck, or vibrate to discover your rhythm

Clean & Store



 
Clean and store in a dry place after use

Safety Notice

- Use water-based lubricant only
- Start with low intensity
- Stop use immediately if discomfort occurs
- Do not use while charging
- For personal use only

Pleasure Guide

Earlobe Touch

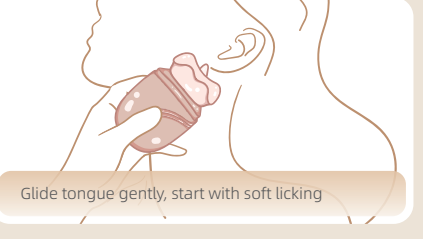


Glide tongue gently, start with soft licking

Neck Kiss




Kiss neck gently, let the foreplay enough

 Nipple Stimulation

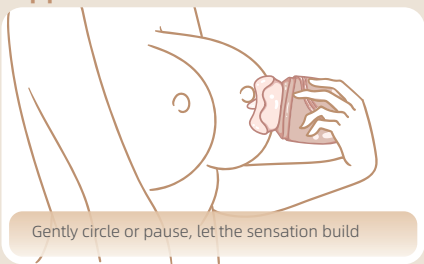


Gently circle or pause, let the sensation build

 Clitoral Focus

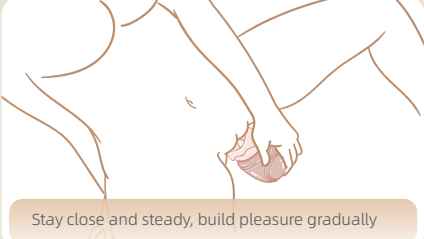


Stay close and steady, build pleasure gradually

 Connect APP

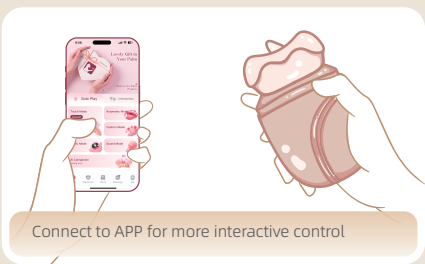


Connect to APP for more interactive control

 Anal Exploration

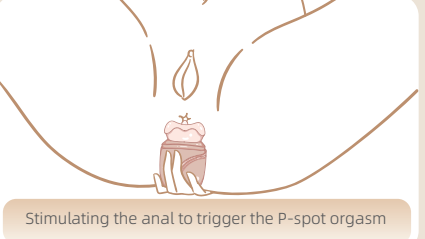

Stimulating the anal to trigger the P-spot orgasm

 Penis Stimulation

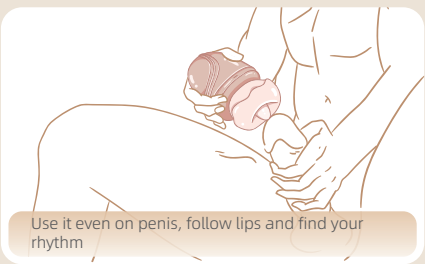

Use it even on penis, follow lips and find your rhythm

Safety Tips

- Rinse with warm water and dry thoroughly
- Use water-based lubricant only
- Start with low intensity
- For personal use only
- Do not use the product while charging
- Keep away from sharp objects or extreme temperatures
- Keep out of reach of children
- Avoid direct sunlight. Store in a cool, dry place

Troubleshooting, Warranty & Customer Support

Troubleshooting

The toy won't turn on or won't charge
Make sure the toy is fully charged using the original charging cable. Press and hold the power button for at least 3 seconds to turn it on. If the toy remains unresponsive after charging, please contact customer support for assistance.

Weak vibration or thrusting function not working
Switch to a different mode or increase the intensity level using the control button or app. If the function still does not respond, the product may not be operating properly. Please contact customer support for further help.

Cannot connect to the app
Ensure that Bluetooth is enabled on your smartphone and that the toy is powered on. Keep the toy close to your phone during pairing. If the connection cannot be established, try restarting Bluetooth or reinstalling the app before attempting again.

Warranty & Customer Support

Warranty Period: 12 months from the date of purchase

Warranty Coverage
If your toy has a manufacturing defect within 12 months, we will provide a free replacement or a full refund.

Exclusions
This warranty does not cover damage caused by:

- Misuse or accidental damage
- Improper cleaning or storage
- Modifications or unauthorized repairs

Warranty & Customer Support Email:
Toycustomerservice@outlook.com

Usage Instructions

Before using this product, please read this instruction manual thoroughly and understand the usage precautions, product features, and methods to ensure correct and safe use. Additionally, keep this manual in a safe place for future reference.

- Clean the product thoroughly before use with a water-based lubricant.
- If not used for a long time, clean it well and store it away from direct sunlight, high temperatures, and high humidity.

Charging

- Always use a standard charging AC adapter and the included charging cable. The fast-charging adapter may cause the built-in battery to deteriorate or fail to charge fully.
- Make sure the connection part does not get wet during charging.
- Ensure the charging time does not exceed 12 hours and monitor the charging process closely.
- Do not use the product while charging.

Maintenance

This product complies with the international waterproof standard and can withstand high-pressure water flow from any angle. Submerging it in water may cause malfunction. Wipe off any moisture and dry it completely after rinsing.

- If not used for a long time, store it away from high humidity and direct sunlight.
- Before the first time or after a long period of non-use, make sure to charge it once fully.

Warning

- As this is an adult product, keep it out of reach of children.
- If you experience skin allergies or discomfort while using the product, stop using it immediately and consult a doctor if necessary.
- If you find any malfunction or abnormal behavior, stop using it immediately and turn off the power.

Disposal

- This product contains a lithium-polymer battery. Do not dispose of it as household waste. When disposing, remove the battery and follow the disposal methods prescribed by your local authorities.



VX723A 说明书
尺寸：70*100mm
材质：128g双铜纸
工艺：四色 骑马钉